

PROFINET TEST TOOL PRO (PNT-Pro) is the program for the analysis and monitoring of PROFINET networks. All functionality needed for troubleshooting and commissioning is placed in one single tool.

The tool has a simple and intuitive interface and uses the network card of your PC.

A report is provided to assess the conformity of your network according to the **guidelines of the PROFIBUS & PROFINET International consortium (PI)**.

More information: <https://www.helmholz-benelux.eu/product/profinet-tool-pro/>

## Installation

**Note:** The latest software is required for the installation of the software. You will find this on the supplied USB key. You can also always request the latest version via [info@helmholz-benelux.eu](mailto:info@helmholz-benelux.eu)

**Run the „setup.exe“ program from the USB key. With some USB keys, the PROFINET TEST TOOL software is bundled in a separate folder.**

## First steps

- Assign a free IP address and the correct subnet mask to the PC, using the network settings of your operating system.
- Connect your PC to a free port of a switch (or PROFINET device) with an ethernet cable.
- Insert the USB license key.
- Start the program **PNT – PN Tool (classic)**.
- Create a new project using the „New“ button.


## Analysis with a free port

- Select **„Analysis via free port“**.
- Select the correct PC interface and press „Analysis wizard“ to start the easy analysis.
- When the analysis is completed you'll get an direct overview.
- A button states the result of each test. (OK, WARNING and ERROR)
- By pressing the button a brief report will be shown.

- On **„Errors and traffic“** you can check for errors in frames and the amount of traffic of each port.
- On **„Topology“** you can check if the topology is according to plan and schematics
- On **„HW-SW Info“** you can check the firmware of your devices and stations with diagnostic
- On **„Network stations“** you can find all ethernet stations with IP-address.

## Analysis with a TAP

- Select „Analysis via TAP/Mirror port“.
- Connect a TAP in series between the CPU and first device

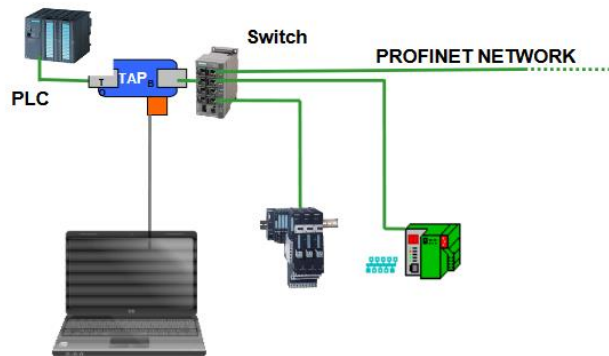

**Note:** downtime is required to connect a TAP

- Select „Live list“. Select the TAP interface.
- Press „Update TAP/Mirror analysis“
- Select „Start Network Validation, Commissioning“

- On „Live list“ you can check missing stations, station with problems or in stop and number of stations lost
- On „Traffic recording“ you can verify traffic load
- On „Cycle time/load(offline)“ you can verify a traffic record and check loads, jitter, min PROFINET cycle times, max PROFINET cycle times, missing traffic

## Printing a report

- You can print the results of the single analysis by pressing the print button
- **For the full report press „print“ from the buttons list on the left**